# Cisco ISR 4000 Series Routers with MACsec

Firmware version:

**Cisco IOS-XE 16.12** 

**Hardware versions:** 

ISR 4321, ISR 4331, ISR 4351 and ISR 4451

**Network Interface Module versions:** 

NIM-2GE-CU-SFP

FIPS-140 Non-Proprietary Security Policy- Security Level 1

Cisco Systems, Inc.

Version 1.4

# **Table of Contents**

| 1 | Inti | oduction   | 1  |
|---|------|--|----|
|   | 1.1  | References   | 1  |
|   | 1.2  | FIPS 140-2 Submission Package                        | 1  |
| 2 | Mo   | dule Description                                     | 2  |
|   | 2.1  | Cisco ISR (4321, 4331, 4351 and 4451)                | 2  |
|   | 2.2  | Network Interface Module (NIM-2GE-CU-SFP)            | 4  |
|   | 2.3  | Validated & Vendor Affirmed Hardware                 | 5  |
|   | 2.4  | FIPS and non-FIPS modes of operation                 | 5  |
|   | 2.5  | Module Validation Level                              | 6  |
| 3 | Cry  | ptographic Boundary                                  | 7  |
| 4 | Cry  | ptographic Module Ports and Interfaces               | 7  |
| 5 | Rol  | les, Services, and Authentication                    | 12 |
|   | 5.1  | User Services  | 12 |
|   | 5.2  | Cryptographic Officer Services.                      | 13 |
|   | 5.3  | Unauthenticated User Services                        | 14 |
| 6 | Cry  | ptographic Key/CSP Management                        | 15 |
|   | 6.1  | User Services and CSP Access                         | 22 |
|   | 6.2  | Crypto Officer Services and CSP Access               | 23 |
| 7 | Cry  | ptographic Algorithms                                | 25 |
|   | 7.1  | Approved Cryptographic Algorithms                    | 25 |
|   | 7.2  | Non-Approved Algorithms allowed for use in FIPS-mode | 26 |
|   | 7.3  | Non-Approved Algorithms                              | 27 |
|   | 7.4  | Self-Tests   | 27 |
| 8 | Phy  | sical Security                                       | 29 |
| 9 | Sec  | cure Operation                                       | 30 |

| 9.1  | System Initialization and Configuration         | 30 |
|------|---|----|
| 9.2  | IPsec Requirements and Cryptographic Algorithms | 31 |
| 9.3  | Protocols                                       | 32 |
| 9.4  | Remote Access                                   | 32 |
| 9.5  | Key Strength                                    | 32 |
| 10 R | elated Documentation                            |    |
| 11 D | efinitions List                                 | 33 |

#### 1 Introduction

This is a non-proprietary Cryptographic Module Security Policy for Cisco ISR 4K network router modules. This security policy describes how modules meet the security requirements of FIPS 140-2 and how to run the modules in a FIPS 140-2 mode of operation.

FIPS 140-2 (Federal Information Processing Standards Publication 140-2 — Security Requirements for Cryptographic Modules) details the U.S. Government requirements for cryptographic modules. More information about the FIPS 140-2 standard and validation program is available on the NIST website at <a href="http://csrc.nist.gov/groups/STM/cmvp/index.html">http://csrc.nist.gov/groups/STM/cmvp/index.html</a>.

#### 1.1 References

This document deals only with operations and capabilities of the module in the technical terms of a FIPS 140-2 cryptographic module security policy. More information is available on the module from the following sources:

- The Cisco Systems website (<a href="http://www.cisco.com">http://www.cisco.com</a>) contains information on the full line of products from Cisco Systems.
- The NIST Cryptographic Module Validation Program website (<a href="http://csrc.nist.gov/groups/STM/cmvp/index.html">http://csrc.nist.gov/groups/STM/cmvp/index.html</a>) contains contact information for answers to technical or sales-related questions for the module.

## 1.2 FIPS 140-2 Submission Package

The security policy document is one document in a FIPS 140-2 Submission Package. In addition to this document, the submission package includes:

- Vendor Evidence
- Finite State Machine
- Other supporting documentation as additional references


With the exception of this non-proprietary security policy, the FIPS 140-2 validation documentation is proprietary to Cisco Systems, Inc. and is releasable only under appropriate non-disclosure agreements. For access to these documents, please contact Cisco Systems, Inc. See "Obtaining Technical Assistance" section for more information.

## 2 Module Description

## 2.1 Cisco ISR (4321, 4331, 4351 and 4451)

The Cisco ISR 4000 Series Routers (4321, 4331, 4351 and 4451) revolutionize WAN communications in the enterprise branch. With new levels of built-in intelligent network capabilities and convergence, it specifically addresses the growing need for application-aware networking in distributed enterprise sites. These locations tend to have lean IT resources. But they often also have a growing need for direct communication with both private data centers and public clouds across diverse links, including Multiprotocol Label Switching (MPLS) VPNs and the Internet.

Cisco 4000 Family ISRs provide you with Cisco® Software Defined WAN (SDWAN) software features and a converged branch infrastructure. Along with superior throughput, these capabilities form the building blocks of next-generation branch-office WAN solutions.

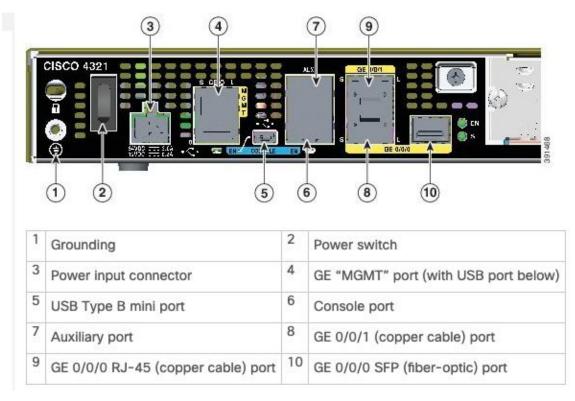


**Figure 1: ISR 4321** 




| 1 | 1 | USB Type B mini port | 2 | Serial console port |
|---|---|----------------------|---|---------------------|
| 3 | 3 | AUX port             | 4 | USB Type A port     |
| , | 5 | Management port      | 6 | LEDs                |

**Figure 2: ISR 4331** 

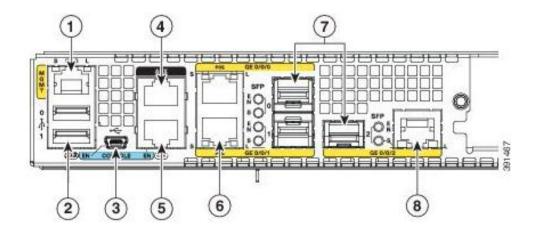

| 1 | GE management port   | 2 | USB Type A port       |
|---|----------------------|---|-----------------------|
| 3 | USB Type B mini port | 4 | Auxiliary port        |
| 5 | Console port         | 6 | RJ-45 port (GE 0/0/1) |
| 7 | SFP port (GE 0/0/0)  | 8 | RJ-45 port (GE/0/0/2) |

**Figure 3: ISR 4351** 

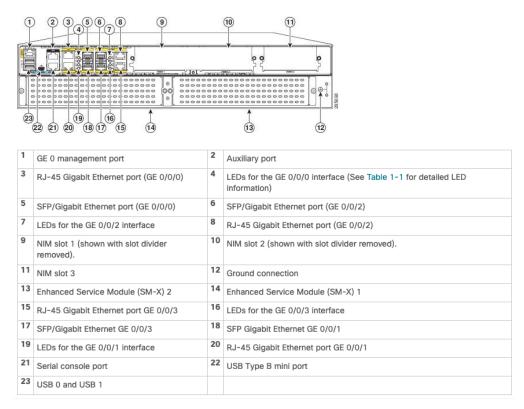

**Figure 4: ISR 4451** 

# 2.2 Network Interface Module (NIM-2GE-CU-SFP)

The 2GE-CU-SFP Network Interface Module (NIM) are software-configurable high-speed connectivity routing port network interface modules for the Cisco ISR 4000 Series Integrated Services Routers (ISR). This network interface modules provide increased density of Ethernet interfaces on the Cisco ISR 4000 Series. Figure 5 shows the network interface module.

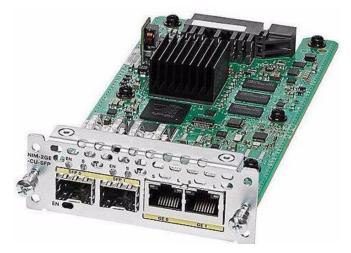


Figure 5: NIM-2GE-CU-SFP

Page 4 of 34 © Copyright 2023 Cisco Systems, Inc.

#### 2.3 Validated & Vendor Affirmed Hardware

The validated configurations are comprised of the following components:

|  |          | Hardware Configurations |
|--|----------|-------------------------|
|  | Chassis  | Line Card               |
|  | ISR 4321 |                         |
|  | ISR 4331 | NIM-2GE-CU-SFP          |
|  | ISR 4351 |                         |
|  | ISR 4451 |                         |

Table 1: Module Hardware Configurations running Cisco IOS-XE 16.12

The vendor affirmed configurations are comprised of the following components:

|          | Vendor Affirmed Hardware Configurations |  |
|----------|---|--|
| Chassis  | Line Card                               |  |
| ISR 4221 | NIM 1CE CU CED NIM ECO 0                |  |
| ISR 4431 | NIM-1GE-CU-SFP, NIM-ES2-8               |  |
| ISR 4461 |   |  |

Table 2: Vendor Affirmed Models<sup>1</sup>

### 2.4 FIPS and non-FIPS modes of operation

The ISR 4000 Series supports a FIPS and non-FIPS mode of operation. The non-FIPS mode of operation is not a recommended operational mode but because the module allows for non-approved algorithms and non-approved key sizes, a non-approved mode of operation exists. The following services are available in a FIPS-Approved mode of operation:

- SSH
- IPSec
- SNMPv3
- MACsec

The following services are available in a non-FIPS-Approved mode of operation:

- SSH
- TLS
- IPSec
- SNMPv3
- MACsec

<sup>&</sup>lt;sup>1</sup> Vendor affirmed devices use the same firmware image (Cisco IOS-XE 16.12) as the modules tested. No claim to conformance can be made as these models were not tested by a CSTL or reviewed by CMVP.

<sup>©</sup> Copyright 2023 Cisco Systems, Inc.

When the services are used in non-FIPS mode they are considered to be non-compliant.

If the device is in the non-FIPS mode of operation, the Cryptographic Officer must follow the instructions in section 9.1 of this security policy to transfer into a FIPS approved mode of operation.

### 2.5 Module Validation Level

The following table lists the level of validation for each area in the FIPS PUB 140-2.

| No.     | Area Title  | Level |
|---------|---|-------|
| 1       | Cryptographic Module Specification                      | 1     |
| 2       | Cryptographic Module Ports and Interfaces               | 1     |
| 3       | Roles, Services, and Authentication                     | 3     |
| 4       | Finite State Model                                      | 1     |
| 5       | Physical Security                                       | 1     |
| 6       | Operational Environment                                 | N/A   |
| 7       | Cryptographic Key management                            | 1     |
| 8       | Electromagnetic Interface/Electromagnetic Compatibility | 1     |
| 9       | Self-Tests  | 1     |
| 10      | Design Assurance  | 3     |
| 11      | Mitigation of Other Attacks                             | N/A   |
| Overall | Overall module validation level                         | 1     |

**Table 3: Module Validation Level** 

# 3 Cryptographic Boundary

The cryptographic boundary for the Cisco ISR 4321, 4331, 4351 and ISR 4451 are defined as encompassing the "top," "bottom," "front," "back," "left" and "right" surfaces of the case; all portions of the "backplane" of the case.

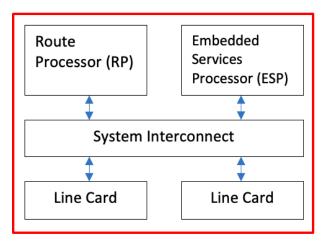


Figure 6: Cryptographic Boundary

# 4 Cryptographic Module Ports and Interfaces

Each module provides a number of physical and logical interfaces to the device, and the physical interfaces provided by the module are mapped to four FIPS 140-2 defined logical interfaces: data input, data output, control input, and status output. The logical interfaces and their mapping are described in the following tables:

| Physical Interfaces                      | FIPS 140-2 Logical Interfaces |
|--|-------------------------------|
| Ethernet Ports (2)                       | Data Input Interface          |
| Backplane (2)                            |                               |
| SFP Port (1)                             |                               |
| Network Interface Module (2)             |                               |
| Console (1)                              |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (2)                       | Data Output Interface         |
| Backplane (2)                            |                               |
| SFP Port (1)                             |                               |
| Network Interface Module (2)             |                               |
| Console/Auxiliary Port (1)               |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (2)                       | Control Input Interface       |
| Backplane (2)                            |                               |
| SFP Port (1)                             |                               |
| Network Interface Module (2)             |                               |
| Console/Auxiliary Port (1)               |                               |

Page 7 of 34

© Copyright 2023 Cisco Systems, Inc.

This document may be freely reproduced and distributed whole and intact including this Copyright Notice.

| Physical Interfaces                      | FIPS 140-2 Logical Interfaces |
|--|-------------------------------|
| USB Port (1)                             |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Power Switch (1)                         |                               |
| Ethernet Ports (2)                       | Status Output Interface       |
| Backplane (2)                            |                               |
| SFP Port (1)                             |                               |
| Network Interface Module (2)             |                               |
| LEDs                                     |                               |
| USB Port (1)                             |                               |
| Console/Auxiliary Port (1)               |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Power Plug                               | Power interface               |

**Table 4: ISR 4321** 

| Physical Interfaces                      | FIPS 140-2 Logical Interfaces |
|--|-------------------------------|
| Ethernet Ports (3)                       | Data Input Interface          |
| Backplane (2)                            | 1                             |
| SFP Port (2)                             |                               |
| Network Interface Module (2)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (3)                       | Data Output Interface         |
| Backplane (2)                            | -                             |
| SFP Port (2)                             |                               |
| Network Interface Module (2)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (3)                       | Control Input Interface       |
| Backplane (2)                            |                               |
| SFP Port (2)                             |                               |
| Network Interface Module (2)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| USB Port (1)                             |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Power Switch (1)                         |                               |
| Ethernet Ports (3)                       | Status Output Interface       |

| Physical Interfaces                      | FIPS 140-2 Logical Interfaces |
|--|-------------------------------|
| SFP Port (2)                             |                               |
| Network Interface Module (2)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| LEDs                                     |                               |
| USB Port (1)                             |                               |
|  |                               |
| Power Plug                               | Power interface               |

**Table 5: ISR 4331** 

| Physical Interfaces                      | FIPS 140-2 Logical Interfaces |
|--|-------------------------------|
| Ethernet Ports (3)                       | Data Input Interface          |
| SFP Port (3)                             |                               |
| Network Interface Module (3)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (3)                       | Data Output Interface         |
| SFP Port (3)                             | •                             |
| Network Interface Module (3)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (3)                       | Control Input Interface       |
| SFP Port (3)                             |                               |
| Network Interface Module (3)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Power Switch                             |                               |

| Ethernet Ports (3)                       | Status Output Interface |
|--|-------------------------|
| SFP Port (3)                             |                         |
| Network Interface Module (3)             |                         |
| Console Port (1)                         |                         |
| Auxiliary Port (1)                       |                         |
| 10/100/1000 Management Ethernet Port (1) |                         |
| LEDs                                     |                         |
| USB (2)                                  |                         |
| Power Plug                               | Power interface         |

**Table 6: ISR 4351** 

| Physical Interfaces                      | FIPS 140-2 Logical Interfaces |
|--|-------------------------------|
| Ethernet Ports (4)                       | Data Input Interface          |
| SFP Port (4)                             | 1                             |
| Network Interface Module (3)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (4)                       | Data Output Interface         |
| SFP Port (4)                             |                               |
| Network Interface Module (3)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Ethernet Ports (4)                       | Control Input Interface       |
| SFP Port (4)                             | r                             |
| Network Interface Module (3)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| Power Switch                             |                               |
| Ethernet Ports (4)                       | Status Output Interface       |
| SFP Port (4)                             | 1                             |
| Network Interface Module (3)             |                               |
| Console Port (1)                         |                               |
| Auxiliary Port (1)                       |                               |
| 10/100/1000 Management Ethernet Port (1) |                               |
| LEDs                                     |                               |
| USB (2)                                  |                               |
| Power Plug                               | Power interface               |

**Table 7: ISR 4451** 

| Physical Interfaces     | FIPS 140-2 Logical Interfaces |
|-------------------------|-------------------------------|
| RJ45 Ethernet Ports (2) | Data Input Interface          |
| SFP Ports (2)           |                               |
| RJ45 Ethernet Ports (2) | Data Output Interface         |
| SFP Ports (2)           |                               |
| RJ45 Ethernet Ports (2) | Control Input Interface       |
| SFP Ports (2)           |                               |
| RJ45 Ethernet Ports (2) | Status Output Interface       |
| SFP Ports (2)           |                               |

**Table 8: NIM-2GE-CU-SFP** 

## 5 Roles, Services, and Authentication

Authentication is identity-based. Each user is authenticated upon initial access to the module. There are two main roles in the router that operators may assume: the Crypto Officer role and the User role. The administrator of the router assumes the Crypto Officer role in order to configure and maintain the router using Crypto Officer services, while the Users exercise only the basic User services. The module supports RADIUS and TACACS+ for authentication. A complete description of all the management and configuration capabilities of the modules can be found in the Cisco ISR 4000 Series Integrated Services Routers Software Configuration Guide Manual<sup>2</sup> and in the online help for the modules.

The User and Crypto Officer passwords and all shared secrets must each be at least eight (8) characters long, including at least one letter and at least one number character, in length (enforced procedurally). See the Secure Operation section for more information. If six (6) integers, one (1) special character and one (1) alphabet are used without repetition for an eight (8) digit PIN, the probability of randomly guessing the correct sequence is one (1) in 251,596,800 (this calculation is based on the assumption that the typical standard American QWERTY computer keyboard has 10 Integer digits, 52 alphabetic characters, and 32 special characters providing 94 characters to choose from in total. Since it is claimed to be for 8 characters with no repetition, then the calculation should be, 10x9x8x7x6x5x32x52. In order to successfully guess the sequence in one minute would require the ability to make over 4,193,280 guesses per second, which far exceeds the operational capabilities of the module.

Additionally, when using RSA-based authentication, RSA key pair has a modulus size of either 2048 or 3072 bits, thus providing at least 112 bits of strength. Assuming the low end of that range (2048 bits), an attacker would have a 1 in  $2^{112}$  chance of randomly obtaining the key, which is much stronger than the one-in-a-million chance required by FIPS 140-2. To exceed a one in 100,000 probability of a successful random key guess in one minute, an attacker would have to be capable of approximately  $8.6 \times 10^{31}$  (5.2 x  $10^{33}$  /60 =  $8.6 \times 10^{31}$ ) attempts per second, which far exceeds the operational capabilities of the modules to support.

It should be noted that the same services are available to both Users and Cryptographic officers, regardless of whether or not they are in a non-FIPS approved mode of operation or a FIPS approved mode of operation.

#### 5.1 User Services

A User enters the system by accessing the console/auxiliary port with a terminal program or SSH v2 session to a LAN port or the 10/100/1000 Management Ethernet Port. The module prompts the User for their username/password combination. If the username/password combination is correct, the User is allowed entry to the module

Page 12 of 34

<sup>&</sup>lt;sup>2</sup> Link located in Section 10.

<sup>©</sup> Copyright 2023 Cisco Systems, Inc.

This document may be freely reproduced and distributed whole and intact including this Copyright Notice.

management functionality. The services available to the User role consist of the following:

- Status Functions View state of interfaces and protocols, firmware version
- Terminal Functions Adjust the terminal session (e.g., lock the terminal, adjust flow control)
- Directory Services Display directory of files kept in memory
- Perform Self-Tests Perform the FIPS 140 start-up tests on demand
- Perform Cryptography Use the cryptography provided by the module:
  - o SSH
  - o IPSec
  - o SNMPv3
  - MACsec

## 5.2 Cryptographic Officer Services

A Crypto Officer enters the system by accessing the console/auxiliary port with a terminal program or SSH v2 session to a LAN port or the 10/100/1000 Management Ethernet Port. The Crypto Officer authenticates in the same manner as a User. The Crypto Officer is identified by accounts that have a privilege level 15 (versus the privilege level 1 for users). A Crypto Officer may assign permission to access the Crypto Officer role to additional accounts, thereby creating additional Crypto Officers.

The Crypto Officer role is responsible for the configuration and maintenance of the router. The Crypto Officer services consist of the following:

- Configure the module Define network interfaces and settings, create command aliases, set the protocols the router will support, enable interfaces and network services, set system date and time, and load authentication information.
- Define Rules and Filters Create packet Filters that are applied to User data streams on each interface. Each Filter consists of a set of Rules, which define a set of packets to permit or deny based characteristics such as protocol ID, addresses, ports, TCP connection establishment, or packet direction.
- Status Functions View the module configuration, routing tables, active sessions, use get commands to view SNMP MIB statistics, health, temperature, memory status, voltage, packet statistics, review accounting logs, and view physical interface status.
- Manage the module Log off users, shutdown or reload the router, manually back up router configurations, view complete configurations, manage user rights, initiate power-on self-tests on demand and restore router configurations.
- Set Encryption Set up the configuration tables for IP tunneling. Set keys and algorithms to be used for each IP range or allow plaintext packets to be set from specified IP address.

- Perform Self-Tests Perform the FIPS 140 start-up tests on demand.
- Zeroization Erasing electronically stored data, cryptographic keys, and CSPs by altering or deleting the contents of the data storage to prevent recovery of the data.

#### 5.3 Unauthenticated User Services

The services for someone without an authorized role are to view the status output from the module's LED pins and cycle power.

# 6 Cryptographic Key/CSP Management

The module securely administers both cryptographic keys and other critical security parameters such as passwords. All keys and CSPs are protected by the password-protection of the Crypto Officer role login and can be zeroized by the Crypto Officer. Zeroization consists of overwriting the memory that stored the key or refreshing the volatile memory. Keys are exchanged and entered electronically via Internet Key Exchange (IKE) or SSH.

The module supports the following critical security parameters (CSPs):

| Key/CSP<br>Name                 | Кеу Туре                        | Description  | Storage             | Generation<br>/Input                         | Output                             | Zeroization  |
|---------------------------------|---------------------------------|--|---------------------|--|------------------------------------|--|
|                                 | •                               | General  | Keys/CSPs           |  |                                    |  |
| DRBG entropy input              | CTR (using AES-256)<br>256-bit  | This is the entropy for SP 800-90 RNG.   | DRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Power cycle<br>the device                                      |
| DRBG Seed<br>(IOS XE)           | CTR (using AES-256)<br>384-bits | This DRBG seed is collected from the onboard Act2Lite cryptographic processor.                     | DRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Automatically<br>every 400<br>bytes or turn<br>off the router. |
| DRBG V                          | CTR (using AES-256)<br>256-bit  | Internal V value<br>used as part of<br>SP<br>800-90<br>CTR_DRBG                                    | DRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Power cycle<br>the device                                      |
| DRBG Key                        | CTR (using AES-256)<br>256-bit  | Internal Key<br>value used as<br>part of SP<br>800-90<br>CTR_DRBG                                  | DRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Power cycle<br>the device                                      |
| Diffie-Hellman<br>Shared Secret | DH 2048 – 4096<br>bits          | The shared exponent used in Diffie-Hellman (DH) exchange. Created per the Diffie-Hellman protocol. | DRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Zeroized upon deletion.  |

| Key/CSP<br>Name                        | Кеу Туре                               | Description  | Storage              | Generation /Input  | Output                             | Zeroization                       |
|--|--|--|----------------------|--|------------------------------------|-----------------------------------|
| Diffie Hellman<br>private key          | DH 224-379 bits                        | The private exponent used in Diffie-Hellman (DH) exchange. This CSP is created using the SP 800-90 CTR_DRBG. | DRAM<br>(plaintext)  | Generated internally via a call to the DRBG.   | Never output<br>from the<br>module | Zeroized upon deletion.           |
| Diffie Hellman<br>public key           | DH 2048 – 4096<br>bits                 | The p used in Diffie-Hellman (DH) exchange. This CSP is created using the SP 800-90 CTR_DRBG.                | DRAM<br>(plaintext)  | Generated internally via a call to the DRBG.   | Never output<br>from the<br>module | Zeroized upon deletion.           |
| EC Diffie-<br>Hellman private<br>key   | ECDH (Curves: P-256, P-384)            | Used for key<br>agreement  | DRAM (plaintext)     | Generated internally via a call to the DRBG.   | Never output from the module       | Power cycle<br>the device         |
| EC Diffie-<br>Hellman public<br>key    | ECDH (Curves:<br>P-256, P-384)         | Used for key agreement   | DRAM<br>(plaintext)  | Generated internally via a call to the DRBG.   | Never output<br>from the<br>module | Power cycle<br>the device         |
| EC Diffie-<br>Hellman shared<br>secret | ECDH (Curves: P-256, P-384)            | Used for key<br>agreement  | DRAM<br>(plaintext)  | Generated internally via a call to the DRBG.   | Never output<br>from the<br>module | Power cycle<br>the device         |
| Operator<br>password                   | Password, at least<br>eight characters | The password of<br>the operator.<br>This CSP is<br>entered by the<br>Cryptographic<br>Officer.               | NVRAM (plaintext)    | Externally<br>generated<br>and entered<br>by the User<br>and/or CO<br>when logging<br>in | Never output<br>from the<br>module | Overwrite<br>with new<br>password |
| Enable<br>password                     | Password, at least<br>eight characters | The plaintext password of the CO role. This CSP is entered by the Cryptographic Officer.                     | NVRAM<br>(plaintext) | Externally generated and entered by the CO.  | Never output<br>from the<br>module | Overwrite<br>with new<br>password |

| Key/CSP<br>Name                      | Кеу Туре                            | Description   | Storage                                      | Generation<br>/Input                         | Output                             | Zeroization                 |
|--------------------------------------|-------------------------------------|---|--|--|------------------------------------|-----------------------------|
| Enable secret                        | Password, at least eight characters | The obfuscated password of the CO role. However, the algorithm used to obfuscate this password is not FIPS approved. Therefore, this password is considered plaintext for FIPS purposes. This password is zeroized by overwriting it with a new password. The Cryptographic Operator optionally configures the module to obfuscate the Enable password. This CSP is entered by the Cryptographic Officer. | NVRAM (plaintext)                            | Externally generated and entered by the CO.  | Never output from the module       | Overwrite with new password |
| RADIUS secret                        | Shared Secret, 16 characters        | The RADIUS shared secret. This CSP is entered by the Cryptographic Officer.   | NVRAM<br>(plaintext),<br>DRAM<br>(plaintext) | Externally generated and entered by the CO.  | Never output<br>from the<br>module | # no radius-<br>server key  |
| RADIUSOverIP<br>SecEncryptionK<br>ey | AES-CBC,<br>AES-GCM, AES-<br>KW     | AES-128/AES-<br>256<br>encryption/decry<br>ption key, used<br>in IPSec tunnel<br>between module<br>and RADIUS to<br>encrypt/decrypt<br>EAP keys.  | NVRAM<br>(plaintext),<br>DRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Power Cycle                 |

| Key/CSP<br>Name                 | Кеу Туре                      | Description  | Storage                                      | Generation<br>/Input                         | Output                             | Zeroization  |
|---------------------------------|-------------------------------|--|--|--|------------------------------------|--|
| RADIUSOverIP<br>SecIntegrityKey | НМАС                          | Integrity/authenti<br>cation key, used<br>in IPSec tunnel<br>between module<br>and RADIUS                                    | NVRAM<br>(plaintext),<br>DRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Power Cycle  |
| TACACS+<br>secret               | Shared Secret, 16 characters  | The TACACS+<br>shared secret.<br>This CSP is<br>entered by the<br>Cryptographic<br>Officer.                                  | NVRAM<br>(plaintext),<br>DRAM<br>(plaintext) | Externally generated and entered by the CO.  | Never output<br>from the<br>module | # no tacacs-<br>server key                           |
|                                 | ,                             | IKI  | E/IPSec                                      | •  |                                    |  |
| skeyid                          | HMAC SHA-1<br>160-bits        | Value derived<br>per the IKE<br>protocol based<br>on the peer<br>authentication<br>SSH<br>method chosen.                     | DRAM<br>(plaintext)                          | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Automatically<br>after IKE<br>session<br>terminated. |
| skeyid_a                        | HMAC SHA-1<br>160-bits        | The IKE key<br>derivation key<br>for non ISAKMP<br>security<br>associations.   | DRAM<br>(plaintext)                          | Generated internally via a call to the DRBG. | Never output from the module       | Automatically<br>after IKE<br>session<br>terminated. |
| skeyid_d                        | HMAC SHA-1<br>160-bits        | The IKE key<br>derivation key<br>for non ISAKMP<br>security<br>associations.   | DRAM<br>(plaintext)                          | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Automatically<br>after IKE<br>session<br>terminated. |
| skeyid_e                        | HMAC SHA-1<br>160-bits        | The IKE key<br>derivation key<br>for non ISAKMP<br>security<br>associations.   | DRAM<br>(plaintext)                          | Generated internally via a call to the DRBG. |                                    | Automatically<br>after IKE<br>session<br>terminated. |
| IKE session<br>encrypt key      | AES -128, 192,<br>or 256 bits | The IKE session<br>encrypt key. This<br>key is created per<br>the Internet Key<br>Exchange Key<br>Establishment<br>protocol. | DRAM<br>(plaintext)                          | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Automatically<br>after IKE<br>session<br>terminated. |

| Key/CSP<br>Name                      | Кеу Туре                                 | Description   | Storage              | Generation<br>/Input                         | Output                             | Zeroization  |
|--------------------------------------|--|---|----------------------|--|------------------------------------|--|
| IKE session<br>authentication<br>key | SHA-1 HMAC<br>160-bits                   | The IKE session<br>authentication<br>key. This key is<br>created per the<br>Internet Key<br>Exchange Key<br>Establishment<br>protocol.  | DRAM<br>(plaintext)  | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Automatically<br>after IKE<br>session<br>terminated. |
| ISAKMP preshared                     | Secret<br>At least eight<br>characters   | The key used to generate IKE skeyid during preshared-key authentication. # no crypto isakmp key command zeroizes it. This key can have two forms based on whether the key is related to the hostname or the IP address. This CSP is entered by the Cryptographic Officer. | NVRAM (plaintext)    | Externally generated and entered by the CO.  | Never output from the module       | # no crypto<br>isakmp key                            |
| IKE RSA<br>Private Key               | RSA (Private<br>Key)<br>2048 – 3072 bits | The key used in IKE authentication. # crypto key zeroize rsa command zeroizes it.   | NVRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | # crypto key<br>zeroize rsa                          |
| IKE RSA Public<br>Key                | RSA (Public<br>Key)<br>2048 – 3072 bits  | The key used in IKE authentication. # crypto key zeroize rsa command zeroizes it.   | NVRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | # crypto key<br>zeroize rsa                          |

| Key/CSP<br>Name                | Кеу Туре                                 | Description  | Storage              | Generation<br>/Input                         | Output                             | Zeroization   |
|--------------------------------|--|--|----------------------|--|------------------------------------|---|
| IPsec encryption key           | AES -128, 192,<br>or 256 bits            | The IPsec encryption key. This key is created per the Internet Key Exchange Key Establishment protocol.                          | DRAM<br>(plaintext)  | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Automatically<br>when IPsec<br>session<br>terminated.                               |
| IPsec<br>authentication<br>key | SHA-1 HMAC<br>160-bits                   | The IPsec<br>authentication<br>key. This key is<br>created per the<br>Internet Key<br>Exchange Key<br>Establishment<br>protocol. | DRAM<br>(plaintext)  | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Automatically<br>when IPsec<br>session<br>terminated.                               |
|                                |  |  | SSH                  |  |                                    |   |
| SSH Private<br>Key             | RSA (Private<br>Key)<br>2048 – 3072 bits | The SSH private key for the module.  | NVRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | SSH private key is zeroized by either deletion (via # crypto key zeroize rsa) or by |
|                                | EC Diffie-<br>Hellman<br>P-256, P-384    |  |                      |  |                                    | overwriting<br>with a new<br>value of the<br>key                                    |
|                                | AES 128-, 192-, or 256-bits              |  |                      |  |                                    |   |
| SSH Public Key                 | RSA (Public<br>Key)<br>2048 – 3072 bits  | The SSH public key for the module.   | NVRAM<br>(plaintext) | Generated internally via a call to the DRBG. | Never output<br>from the<br>module | Zeroized upon deletion.   |
|                                | EC Diffie-<br>Hellman<br>P-256, P-384    |  |                      |  |                                    |   |
|                                | AES 128-, 192-, or 256- bits             |  |                      |  |                                    |   |

| Key/CSP<br>Name                                | Кеу Туре                        | Description  | Storage                      | Generation<br>/Input                                      | Output  | Zeroization   |
|--|---------------------------------|--|------------------------------|---|---|---|
| SSH Session<br>Key                             | AES 128-, 192-,<br>or 256- bits | The SSH session<br>key. This key is<br>created through<br>SSH key<br>establishment.  | DRAM<br>(plaintext)          | Generated internally via a call to the DRBG.              | Never output<br>from the<br>module  | Automatically<br>when the SSH<br>session is<br>terminated.  |
| SSH Integrity<br>Key                           | SHA-1 HMAC<br>160-bits          | Used for SSH connections integrity to assure the traffic integrity.  | DRAM<br>(plaintext)          | Generated internally via a call to the DRBG.              | Never output<br>from the<br>module  | Automatically<br>when the SSH<br>session is<br>terminated.  |
|  |                                 | SN   | MPv3                         | •   | •   |   |
| SNMPv3<br>Password                             | Secret 256 bits                 | This secret is<br>used to derive<br>HMAC-SHA1<br>key for SNMPv3<br>Authentication  | DRAM                         | Externally generated and entered by the CO.               | Never output<br>from the<br>module  | Powercycle  |
| snmpEngineID                                   | Shared secret 32-bits           | Unique string to identify the SNMP engine  | NVRAM                        | Externally generated and entered by the CO.               | Never output<br>from the<br>module  | # no snmp-<br>server<br>engineID<br>local<br>engineid-<br>string,<br>overwritten<br>with new<br>engine ID |
| SNMP session key                               | AES 128-bit                     | Encrypts SNMP traffic  | DRAM                         | Internally<br>generated via<br>SNMP KDF                   | Never output from the module  | Power cycle   |
|  |                                 | M  | ACSec                        |   |   |   |
| MACsec<br>Security<br>Association Key<br>(SAK) | AES-GCM<br>128/256 bits         | Used for creating<br>Security<br>Associations<br>(SA) for<br>encrypting/decry<br>pting the<br>MACSec traffic<br>in the MACSec<br>hardware. | MACsec<br>PHY<br>(plaintext) | Derived from<br>the CAK<br>using the<br>SP800-108<br>KDF. | Output from<br>the module to<br>other<br>members of a<br>MACsec<br>connectivity<br>association<br>when<br>encrypted by<br>the KEK | Automatically<br>when session<br>expires  |

| Key/CSP<br>Name                                    | Кеу Туре                | Description  | Storage                      | Generation<br>/Input                                      | Output                             | Zeroization                              |
|--|-------------------------|--|------------------------------|---|------------------------------------|--|
| MACsec<br>Connectivity<br>Association Key<br>(CAK) | AES-GCM<br>128/256 bits | A secret key<br>possessed by<br>members of a<br>MACSec<br>connectivity<br>association.     | MACsec<br>PHY<br>(plaintext) | Externally generated and entered by the CO.               | Never output<br>from the<br>module | Automatically<br>when session<br>expires |
| MACsec KEK   | AES-GCM<br>128/256 bits | Used to transmit<br>SAKs to other<br>members of a<br>MACSec<br>connectivity<br>association | MACsec<br>PHY<br>(plaintext) | Derived from<br>the CAK<br>using the<br>SP800-108<br>KDF. | Never output<br>from the<br>module | Automatically<br>when session<br>expires |
| MACsec ICK   | Secret                  | Used to verify<br>the integrity and<br>authenticity.                                       | MACsec<br>PHY<br>(plaintext) | Derived from<br>the CAK<br>using the<br>SP800-108<br>KDF. | Never output<br>from the<br>module | Automatically<br>when session<br>expires |

Table 9: CSPs

### 6.1 User Services and CSP Access

The services accessing the CSPs, the type of access - read (r), write (w) and zeroized/delete (d) - and which role accesses the CSPs are listed below.

| Services & Access           | Description   | Keys & CSPs  |
|-----------------------------|---|--|
| View Status Functions       | View state of interfaces and protocols, firmware version.                   | Operator password – r  |
| Terminal Functions          | Adjust the terminal session (e.g., lock the terminal, adjust flow control). | Operator password – r  |
| Directory Services          | Display directory of files kept in memory.                                  | Operator password – r  |
| Self-Tests                  | Execute the FIPS 140 start-up tests on demand                               | N/A  |
| Random Number<br>Generation | Key generation and seeds for asymmetric key generation                      | DRBG entropy input, DRBG seed, DRBG<br>V, DRBG Key – r, w, d   |
| Key Exchange                | Key exchange over Diffie-Hellman and EC Diffie-Hellman                      | Diffie-Hellman public key, Diffie-Hellman private key, Diffie-Hellman shared secret, EC Diffie-Hellman Public Key, EC Diffie-Hellman Private Key, EC Diffie-Hellman shared secret – w, d |
| TACACS+                     | User & CO authentication to the module using TACACS+.                       | TACACS+ secret,- r   |

| RADIUS Key Wrap                | Establishment and subsequent receive 802.11 PMK from the RADIUS server. | RADIUSOverIPSecEncryptionKey,<br>RADIUSOverIPSecIntegrityKey, RADIUS<br>Server Shared Secret – w, d |
|--------------------------------|---|---|
| SSH Functions                  | Negotiation and encrypted data transport via SSH                        | Operator password, SSH private key, SSH public key, SSH integrity key, SSH Session Key – r          |
| Module Read-only Configuration | Viewing of configuration settings                                       | Operator password – r   |

**Table 10: User CSP Access** 

# 6.2 Crypto Officer Services and CSP Access

| Services & Access              | Description   | Keys & CSPs <sup>3</sup>   |
|--------------------------------|---|--|
| View Status<br>Functions       | View the switch configuration, routing tables, active sessions, health, temperature, memory status, voltage, packet statistics, review accounting logs, and view physical interface status.   | Operator password, Enable password – r, w, d   |
| Define Rules<br>and Filters    | Create packet Filters that are applied to User data streams on each interface. Each Filter consists of a set of Rules, which define a set of packets to permit or deny based on characteristics such as protocol ID, addresses, ports, TCP connection establishment, or packet direction. | Operator password, Enable password – r, w, d   |
| Self-Tests                     | Execute the FIPS 140 start-up tests on demand   | N/A  |
| Random<br>Number<br>Generation | Key generation and seeds for asymmetric key generation  | DRBG entropy input, DRBG seed, DRBG V, DRBG Key – r, w, d  |
| Key Exchange                   | Key exchange over Diffie-Hellman<br>and EC Diffie-Hellman   | Diffie-Hellman public key, Diffie-Hellman private key, Diffie-Hellman shared secret, EC Diffie-Hellman Public Key, EC Diffie-Hellman Private Key, EC Diffie-Hellman shared secret – w, d |
| TACACS+                        | User & CO authentication to the module using TACACS+.   | TACACS+ secret – w, d  |

 $<sup>^{3}</sup>$  r = CSP is read by module, w = CSP is generated, derived and/or used by module =, d = CSP is zeroized by module.

Page 23 of 34

<sup>©</sup> Copyright 2023 Cisco Systems, Inc.

| Zeroization             | Zeroize CSPs and cryptographic keys<br>by cycling power to zeroize all<br>cryptographic keys stored in SDRAM.<br>The CSPs (password, secret,<br>engineID) stored in Flash can be<br>zeroized by overwriting with a new<br>value. | All Keys and CSPs will be destroyed   |
|-------------------------|--|---|
| Module<br>Configuration | Selection of non-cryptographic configuration settings  | N/A   |
| SNMPv3                  | Non-security related monitoring by<br>the CO using SNMPv3  | snmpEngineID, SNMPv3 Password, SNMP session key – w, d  |
| SSH                     | Establishment and subsequent data transfer of an SSH session for use between the module and the CO.  | Operator password, SSH private key, SSH public key, SSH integrity key, Session Key – w, d   |
| IPsec                   | Configure IPsec VPN parameters, provide entry and output of CSPs.  | skeyid, skeyid_a, skeyid_e, IKE session<br>encrypt key, IKE session authentication key, ISAKMP<br>preshared, IKE RSA private Key, IKE RSA public key,<br>IPsec encryption key, IPsec authentication key, DRBG<br>entropy input, DRBG V, DRBG Key – w, d |
| RADIUS Key<br>Wrap      | Establishment and subsequent receipt of 802.11 PMK from the RADIUS server.   | RADIUSOverIPSecEncryptionKey,<br>RADIUSOverIPSecIntegrityKey, RADIUS Server<br>Shared Secret – w, d   |
| MACSec<br>Functions     | Establishment and subsequent data transfer of an MACSec session for use between the module and the CO  | MACsec Security Association Key, MACsec<br>Connectivity Association Key, MACsec KEK, MACsec<br>ICK – w, d   |

**Table 11: CO services and CSPs** 

# 7 Cryptographic Algorithms

# 7.1 Approved Cryptographic Algorithms

The Cisco ISR 4000 supports many different cryptographic algorithms. However, only FIPS approved algorithms may be used while in the FIPS mode of operation. The following table identifies the approved algorithms included in the ISR 4000 for use in the FIPS mode of operation.

| Algorithm <sup>4</sup>               | Supported Mode   | Cert.#          |
|--------------------------------------|--|-----------------|
| IC2M                                 |  |                 |
| AES                                  | ECB (128, 192, 256); CBC (128, 192, 256); CMAC (128, 192, 256); GMAC (128, 192, 256); CFB128 (128, 192, 256); GCM (128, 192, 256); KW (128, 256) | A1462           |
| SHS                                  | SHA-1, -256, -384, and -512 (Byte Oriented)  | A1462           |
| HMAC                                 | SHA-1, -256, -384, and -512  | A1462           |
| DRBG                                 | CTR (using AES-256)  | A1462           |
| ECDSA                                | KeyGen, KeyVer, SigGen, SigVer (P-256, P-384)  | A1462           |
| RSA                                  | Key Generation (2048-3072 bits); PKCS#1 v.1.5, 1024-4096 bit key SigGen, SigVer  • 1024-bit keys allowed for signature verification only.        | A1462           |
| CVL                                  | IKEv2 KDF, SSH KDF, SNMP KDF  Note: The IKEv2, SSH, and SNMP protocols have not been reviewed or tested by the CAVP and CMVP.                    | A1462           |
| KAS-ECC-SSC (NIST<br>SP 800-56Arev3) | KAS-ECC-SSC: - Curves:   | A1462           |
| KAS-FFC-SSC (SP 800-<br>56Arev3)     | KAS-FFC-SSC: - modp-2048 - modp-3072 - modp-4096   | A1462           |
| KBKDF (SP800-108) <sup>5</sup>       | HMAC-SHA1  | A1462           |
| CKG                                  |  | Vendor affirmed |

<sup>&</sup>lt;sup>4</sup> Not all algorithms/modes tested on the CAVP validation certificates are implemented in the module.

Page 25 of 34

<sup>&</sup>lt;sup>5</sup> KBKDF tested in counter mode

<sup>©</sup> Copyright 2023 Cisco Systems, Inc.

This document may be freely reproduced and distributed whole and intact including this Copyright Notice.

| Algorithm <sup>4</sup>             | Supported Mode                                     | Cert.# |
|------------------------------------|--|--------|
| Microsemi VSC 8584/ NIM-2GE-CU-SFP |  |        |
| AES                                | ECB (128, 256), GCM (128, 256),<br>GMAC (128, 256) | 3504   |

**Table 12: FIPS -Approved Algorithms** 

- The module's AES-GCM implementation conforms to IG A.5 scenario #1 following RFC 7296 for IPSec/IKEv2. The module uses RFC 7296 compliant IKEv2 to establish the shared secret from which the AES GCM encryption keys are derived. When the IV exhausts the maximum number of possible values for a given session key, the first party, client or server, to encounter this condition will trigger a handshake to establish a new encryption key. In case the module's power is lost and then restored, a new key for use with the AES GCM encryption/decryption shall be established.
- When supporting the MACsec protocol in the FIPS approved modes of operation the
  implementation (see CAVP cert # AES 4853) conforms to IG A.5, scenario #3, when
  operating in a FIPS approved mode of operation. AES GCM, IVs are generated both
  internally and deterministically and are a minimum of 96-bits in length as specified in
  SP 800-38D, Section 8.2.1.
- KTS (AES Cert. #A1462; key wrapping; key establishment methodology provides between 128 and 256 bits of encryption strength)
- KAS (KAS-SSC Cert. #A1462, CVL Cert. #A1462; key establishment methodology provides between 128 and 192 bits of encryption strength)
- KAS (KAS-SSC Cert. #A1462, CVL Cert. #A1462; key establishment methodology provides between 112 and 152 bits of encryption strength)

The KAS FFC and KAS ECC strengths are as follows:

KAS-ECC-SSC: 128 and 192 bits of encryption strength KAS-FFC-SSC: 112 and 152 bits of encryption strength

## 7.2 Non-Approved Algorithms allowed for use in FIPS-mode

The ISR 4000 cryptographic module implements the following non-Approved algorithms that are allowed for use in FIPS-mode:

• NDRNG to seed FIPS approved DRBG (256 bits)

# 7.3 Non-Approved Algorithms

The ISR 4000 cryptographic module implements the following non-approved algorithms that are not permitted for use in FIPS 140-2 mode of operations:

| Service               | Non-Approved Algorithm   |
|-----------------------|--|
| SSH (non-             | Hashing: MD5   |
| compliant)            | MACing: HMAC MD5   |
|                       | Symmetric: DES, Triple-DES   |
|                       | Asymmetric: 1024-bit RSA, 1024-bit Diffie-Hellman                                  |
| TLS (non-             | Hashing: MD5, SHA  |
| compliant)            | MACing: HMAC MD5, HMAC SHA   |
|                       | Symmetric: AES, DES, RC4, Triple-DES   |
|                       | Asymmetric: ECDSA, RSA, DH, ECDH   |
|                       | KDF: TLS KDF   |
| IPsec (non-compliant) | Hashing: MD5   |
|                       | MACing: HMAC MD5   |
|                       | Symmetric: DES, RC4, Triple-DES  |
|                       | Asymmetric: 1024-bit RSA, 1024-bit Diffie-Hellman                                  |
| SNMP (non-compliant)  | Hashing: MD5   |
|                       | MACing: HMAC MD5   |
|                       | Symmetric: DES, RC4  |
|                       | Asymmetric: 1024-bit RSA, 1024-bit Diffie-Hellman                                  |
| RSA Key<br>Wrapping   | RSA Key Wrapping (Key establishment providing 112 or 128 bits of security strength |

**Table 13: Non-Approved Algorithms** 

#### 7.4 Self-Tests

The modules include an array of self-tests that are run during startup and periodically during operations to prevent any secure data from being released and to ensure all components are functioning correctly. The modules implement the following power-on self-tests:

- Known Answer Tests:
  - o IC2M:
    - AES KAT,

Page 27 of 34

© Copyright 2023 Cisco Systems, Inc.

This document may be freely reproduced and distributed whole and intact including this Copyright Notice.

- AES-GCM KAT,
- SHA-1 KAT,
- SHA-256 KAT,
- SHA-384 KAT,
- SHA-512 KAT,
- HMAC SHA-1 KAT,
- HMAC SHA-256 KAT,
- HMAC SHA-384 KAT,
- HMAC SHA-512 KAT,
- DRBG KAT,
- KAS ECC Primitive "Z" KAT (NIST SP 800-56Arev3),
- KAS FFC Primitive "Z" KAT (NIST SP 800-56Arev3),
- IKEv2 KDF KAT,
- SNMP KDF KAT,
- SRTP KDF KAT,
- SSH KDF KAT,
- RSA KAT.
- o Firmware Integrity Test (RSA 2048 w/ SHA-256)
- o NIM-2GE-CU-SFP (MACsec):
  - AES-GCM KAT

The modules perform all power-on self-tests automatically at boot. All power-on self-tests must be passed before any operator can perform cryptographic services. The power-on self-tests are performed after the cryptographic systems are initialized but prior any other operations; this prevents the module from passing any data during a power-on self-test failure. In addition, the modules also provide the following conditional self-tests:

- Continuous Random Number Generator test for the FIPS-approved DRBG
- Continuous Random Number Generator test for the non-approved RNG
- Pair-Wise Consistency Test for RSA signature keys
- Pair-Wise Consistency Test for RSA keys used in key establishment
- Firmware Load Test

# 8 Physical Security

The modules are production grade multi-chip standalone cryptographic modules that meet level 1 physical security requirements.

## 9 Secure Operation

The module meets all the Level 1 requirements for FIPS 140-2. The module is shipped only to authorized operators by the vendor, and the module is shipped in Cisco boxes with Cisco adhesive, so if tampered with the recipient will notice. Follow the setting instructions provided below to place the module in FIPS-approved mode. Operating this module without maintaining the following settings will remove the module from the FIPS approved mode of operation.

Upon initial boot from the factory, the ISR is in a non-FIPS mode of operation. To transition from a non-FIPS mode of operation to a FIPS mode of operation, the Cryptographic Officer must follow all steps detailed in section 9.1 of this security policy

### 9.1 System Initialization and Configuration

Step1 - The value of the boot field must be 0x2102. This setting disables break from the console to the ROM monitor and automatically boots. From the "configure terminal" command line, the Crypto Officer enters the following syntax:

```
config-register 0x2102
```

Step 2 - The Crypto Officer must create the "enable" password for the Crypto Officer role. Procedurally, the password must be at least 8 characters, including at least one letter and at least one number, and is entered when the Crypto Officer first engages the "enable" command. The Crypto Officer enters the following syntax at the "#" prompt:

```
enable secret [PASSWORD]
```

Step 3 - The Crypto Officer must set up the operators of the module. The Crypto Officer enters the following syntax at the "#" prompt:

```
Username [USERNAME]
```

Password [PASSWORD]

Step 4 – For the created operators, the Crypto Officer must always assign passwords (of at least 8 characters, including at least one letter and at least one number) to users. Identification and authentication on the console/auxiliary port is required for Users. From the "configure terminal" command line, the Crypto Officer enters the following syntax:

```
line con 0
password [PASSWORD]
```

login local

Step 5 - The Crypto Officer may configure the module to use RADIUS or TACACS+ for authentication. Configuring the module to use RADIUS or TACACS+ for authentication is optional. If the module is configured to use RADIUS or TACACS+, the Crypto-Officer

Page 30 of 34

© Copyright 2023 Cisco Systems, Inc.

This document may be freely reproduced and distributed whole and intact including this Copyright Notice.

must define RADIUS or TACACS+ shared secret keys that are at least 16 characters long, including at least one letter and at least one number.

- Step 6 Dual IOS mode is not allowed. ROMMON variable IOSXE\_DUAL\_IOS must be set to 0.
- Step 7 In service software upgrade (ISSU) is not allowed. The operator should not perform in service software upgrade of an ISR4000 FIPS validated firmware image
- Step 8 Use of the debug.conf file is not allowed. The operator should not create the bootflash:/debug.conf file and use it for setting environment variables values.
- Step 9 Execute the "platform ipsec fips-mode" command.
- Step 10 After executing reload/reboot command. The device will enter the FIPS mode.

**NOTE:** The keys and CSPs generated in the cryptographic module during FIPS mode of operation cannot be used when the module transitions to non-FIPS mode and vice versa. While the module transitions from FIPS to non-FIPS mode or from non-FIPS to FIPS mode, all the keys and CSPs are to be zeroized by the Crypto Officer.

### 9.2 IPsec Requirements and Cryptographic Algorithms

Step 1 - The only type of key management that is allowed in FIPS mode is Internet Key Exchange (IKE).

Step 2 - Although the IOS implementation of IKE allows a number of algorithms, only the following algorithms are allowed in a FIPS 140-2 configuration:

- ah-sha-hmac
- ah-sha256-hmac
- ah-sha384-hmac
- ah-sha512-hmac
- esp-sha-hmac
- esp-sha256-hmac
- esp-sha384-hmac
- esp-sha512-hmac
- esp-aes
- esp-gcm

Step 3 - The following algorithms shall not be used:

- MD-5 for signing
- MD-5 HMAC
- DES

#### 9.3 Protocols

Secure DNS and GDOI is not allowed in FIPS mode of operation and shall not be configured.

#### 9.4 Remote Access

SSH access to the module is allowed in FIPS approved mode of operation, using SSH v2 and a FIPS approved algorithm.

SNMPv3 communications with the module are allowed in FIPS approved mode.

## 9.5 Key Strength

Key sizes with security strength of less than 112-bits shall not be used in FIPS mode.

#### 10 Related Documentation

This document deals only with operations and capabilities of the security appliances in the technical terms of a FIPS 140-2 cryptographic device security policy. More information is available on the security appliances from the sources listed in this section and from the following source:

- The NIST Cryptographic Module Validation Program website (<a href="http://csrc.nist.gov/groups/STM/cmvp/index.html">http://csrc.nist.gov/groups/STM/cmvp/index.html</a>) contains contact information for answers to technical or sales-related questions for the security appliances.
- Software Configuration Guide (https://www.cisco.com/c/en/us/td/docs/routers/access/4400/software/configuration/guide/isr4400swcfg.html)
- For LED related information please read the following document (<a href="https://www.cisco.com/c/en/us/td/docs/routers/access/4400/hardware/installation/guide4400-4300/C4400\_isr/Overview.html?bookSearch=true">https://www.cisco.com/c/en/us/td/docs/routers/access/4400/hardware/installation/guide4400-4300/C4400\_isr/Overview.html?bookSearch=true</a>)

#### 11 Definitions List

ACL Access Control List

AES Advanced Encryption Standard

AH Authentication Header

ISR Aggregation Services Router

CMVP Cryptographic Module Validation Program

CSE Communications Security Establishment (Canada)

CSP Critical Security Parameter

DRAM Dynamic RAM

DRBG Deterministic random bit generator

EDC Error Detection Code

ESP Encapsulating Security Payload

FIPS Federal Information Processing Standard

Gbps Gigabits per second

GigE Gigabit Ethernet

HMAC Hash Message Authentication Code

HTTP Hyper Text Transfer Protocol

IKE Internet Key Exchange

IP Internet Protocol

ISAKMP Internet Security Association and Key Management Protocol

ISSU In service software upgrade

KAT Known Answer Test

KDF Key Derivation Function

LAN Local Area Network
LED Light Emitting Diode

MAC Message Authentication Code

MPLS Multiprotocol Label Switching

NIST National Institute of Standards and Technology

NVRAM Non-Volatile Random Access Memory

PIN Personal Identification Number

QoS Quality of Service

RADIUS Remote Authentication Dial-In User Service

Page 33 of 34

© Copyright 2023 Cisco Systems, Inc.

This document may be freely reproduced and distributed whole and intact including this Copyright Notice.

RAM Random Access Memory

RNG Random Number Generator

RP Route Processor

RSA Rivest Shamir and Adleman method for asymmetric encryption

SHA Secure Hash Algorithm

SNMP Simple Network Management Protocol

SSH Secure Shell

TACACS Terminal Access Controller Access Control System

TCP Transmission Control Protocol

TLS Transport Layer Security

USB Universal Serial Bus

VPN Virtual Private Network